

## **Full Suspension**

Models:

Fuel EX, Lush, Remedy, Session, Slash, Top Fuel

|   |                                | ruel Ex, Lush, Remedy, Session, Slash, Top Fuel        |  |         |                            |     |        |      |  |  |
|---|--------------------------------|--|--|---------|----------------------------|-----|--------|------|--|--|
|   | •                              | Rider with basic mechanical skills, tools, and knowled |  |         |                            |     |        |      |  |  |
|   | ٧                              |  | Dealer/  | Experie | perienced bicycle mechanic |     |        |      |  |  |
| Service at the indicated distance or time - whichever is most                 | Months                         | Every  | New Bike   | 3       | 6                          | 9   | 12     | 24   |  |  |
| appropriate for your riding conditions  | Miles                          | Ride   | 1st  | 200     | 400                        | 600 | 800    | 1600 |  |  |
| appropriate for your fluing conditions  | Hours                          | Ride   | Service  | 25      | 50                         | 75  | 100    | 200  |  |  |
| Annual Tune-up and Safety Inspection  | ı                              |  |  |         |                            |     | ٧      |      |  |  |
| Electronics   |                                |  |  |         |                            |     |        |      |  |  |
| Replace computer and sensor batteries   |                                |  |  |         |                            |     | •      |      |  |  |
| Ride+   |                                |  | -  |         |                            |     | _      |      |  |  |
| Inspect electrical wires and connectors for damage Check for firmware updates |                                |  | •<br>V   |         | •<br>V                     |     | •<br>V |      |  |  |
| Front Suspension  |                                |  | V  |         | _ v                        |     | V      |      |  |  |
| Clean fork with mild soap and water, dry with soft towel                      |                                | •  |  |         |                            |     |        |      |  |  |
| Inspect upper tubes for scratches   |                                | •  |  |         |                            |     |        |      |  |  |
| Lubricate dust seals and upper tubes  |                                | •  |  |         |                            |     |        |      |  |  |
| Inspect preload/air pressure and sag  |                                | •  |  |         |                            |     |        |      |  |  |
| Inspect for visual damage and function of all controls                        |                                |  |  |         |                            |     |        |      |  |  |
| Inspect front suspension fasteners  |                                |  | ٧  | ٧       | ٧                          | ٧   | ٧      |      |  |  |
| FOX   |                                |  |  |         |                            |     |        |      |  |  |
| New seals, wipers and bath oil  | New seals, wipers and bath oil |  |  |         | ٧                          |     | ٧      |      |  |  |
| Full fork service (damper and air spring rebuilds)                            |                                |  |  |         |                            |     | ٧      |      |  |  |
| ROCKSHOX  |                                |  |  |         |                            |     |        |      |  |  |
| Clean and lubricate remote lockout cable and housing                          |                                |  |  | •       | •                          | •   | •      |      |  |  |
| Remove lowers, clean/inspect bushings and change oil bath                     |                                |  |  |         | ٧                          |     | √<br>√ |      |  |  |
| Change oil in damping system  Coil  |                                |  |  |         |                            |     | v      |      |  |  |
| Clean and lubricate coil spring   |                                |  |  |         |                            |     | v      |      |  |  |
| X-Fusion  |                                |  |  |         |                            |     |        |      |  |  |
| Remove lowers, clean/inspect bushings and change oil bath if necessal         | ry                             |  |  | ٧       | ٧                          | ٧   | V      |      |  |  |
| Clean and lubricate air spring assembly                                       | •                              |  |  |         | ٧                          |     | ٧      |      |  |  |
| Replace dust wiper and air seals  |                                |  |  |         |                            |     | ٧      |      |  |  |
| Change oil in damping system  |                                |  |  |         |                            |     | ٧      |      |  |  |
| Rear Suspension   |                                |  |  |         |                            |     |        |      |  |  |
| Inspect preload/air pressure and sag  |                                | •  |  |         |                            |     |        |      |  |  |
| Inspect rear suspension hardware  |                                | •  |  |         |                            |     |        |      |  |  |
| Inspect for visual damage and function of all controls                        |                                | •  |  |         |                            |     |        |      |  |  |
| Clean shock with mild soap and water, dry with soft towel                     |                                |  |  |         |                            |     |        |      |  |  |
| · · · · · · · · · · · · · · · · · · ·   |                                |  | V  |         |                            |     |        |      |  |  |
| Re-torque rear suspension hardware  |                                |  | V  |         |                            |     |        |      |  |  |
| FOX   |                                |  |  |         |                            |     |        |      |  |  |
| Air sleeve maintenance (seals, wipers, oil)                                   |                                |  |  |         | ٧                          |     | ٧      |      |  |  |
| Full shock service (damper rebuild, air seal replacement)                     |                                |  |  |         |                            |     | ٧      |      |  |  |
| ROCKSHOX  |                                |  |  |         |                            |     |        |      |  |  |
| Remove, clean, and grease mounting hardware                                   |                                |  |  | •       | •                          | •   | •      |      |  |  |
| Inspect eyelet bushing and mounting hardware for wear for wear                |                                |  |  |         |                            |     | ٧      |      |  |  |
| Inspect shaft, reservoir, damper body and air can for damage                  |                                |  |  |         |                            |     | ٧      |      |  |  |
| Replace all seals   |                                |  |  |         |                            |     | ٧      |      |  |  |
| Replace damping fluid (if aplicable)  |                                |  | 1  |         |                            |     | ٧      |      |  |  |
| X-Fusion  |                                |  |  |         |                            |     |        |      |  |  |
| Inspect shock hardware  |                                |  |  |         |                            |     |        |      |  |  |
| ·   |                                |  | <del>                                     </del> | V       | -,                         | v   | v      |      |  |  |
| Remove air canister, clean and lubricate                                      |                                |  | 1  | V       | ٧                          | V   |        |      |  |  |
| Replace air sleeve seals  |                                |  | <u> </u>   |         | ٧                          |     | ٧      |      |  |  |
| Full damper system rebuild and oil change                                     |                                |  |  |         |                            |     | ٧      |      |  |  |

| Dropper Post  | T   |   |          |    |  |    |    |
|---|-----|---|----------|----|--|----|----|
| ROCKSHOX  |     |   |          |    |  |    |    |
| Bleed hose and remote   |     |   |          |    |  | ٧  |    |
| Replace keys, topcap seals, and seal head   |     |   |          |    |  | ٧  |    |
|   |     |   |          |    |  | _  | -/ |
| Complete seatpost overhaul  KS  |     |   |          |    |  |    | ٧  |
| Clean and lubricate seatpost  |     |   |          | ٧  |  | ٧  |    |
| Brakes  |     |   |          | •  |  | _  |    |
| Inspect brake function  | •   |   |          |    |  |    |    |
| Inspect brake pads and disc for wear or contamination   | •   |   |          |    |  |    |    |
| Inspect brake hoses for damage  | •   |   |          |    |  |    |    |
| Inspect brake mounting hardware   | •   |   |          |    |  |    |    |
| Apply lubricant to brake lever pivots   |     | • | •        | •  | •  | •  |    |
| Bleed disc brakes   |     |   |          | ٧  |  | ٧  |    |
| Clean brake caliper and inspect pads  |     |   | ٧        | ٧  | ٧  | ٧  |    |
| Replace disc brake fluid  |     |   |          |    |  | ٧  |    |
| Drivetrain  | _   |   |          |    |  |    |    |
| Inspect chain condition and clean/lube if necessary Inspect shift cables and housing for wear or damage                 | •   |   |          |    | <del> </del>                                     |    |    |
| Inspect shift capies and nousing for wear or damage Inspect the condition and operation of shift-levers and derailleurs | •   |   |          |    |  |    |    |
| Inspect the condition and operation of sinit-levers and defailed is   | •   |   |          |    | <del>                                     </del> |    |    |
| Clean/degrease drivetrain   |     |   | ٧        | V  | V  | ٧  |    |
| Inspect chain and sprockets for wear  |     | ٧ | V        | v  | V  | ٧  |    |
| Inspect derailleurs and lubricate pivots  |     | ٧ | ٧        | ٧  | ٧  | ٧  |    |
| Inspect derailleur hanger alignment and hardware  |     | ٧ | ٧        | ٧  | ٧  | ٧  |    |
| Inspect the crank/crankarms for damage or play  |     | ٧ | ٧        | ٧  | ٧  | ٧  |    |
| Clean and inspect the bottom bracket cable guide  |     | ٧ | ٧        | ٧  | ٧  | ٧  |    |
| Inspect the bottom bracket  |     | ٧ | ٧        | ٧  | ٧  | ٧  |    |
| Inspect Di2 wires and connectors  |     | ٧ | ٧        | ٧  | ٧  | ٧  |    |
| Check for Di2 firmware update   |     | ٧ | ٧        | ٧  | ٧  | ٧  |    |
| Service pedals/grease threads   |     |   |          |    |  | ٧  |    |
| Service bottom bracket  |     |   |          |    |  | ٧  |    |
| Frame and Components Clean and polish finish  |     |   |          |    |  |    |    |
| Inspect frame and fork  | + • |   |          |    |  |    |    |
| Inspect stem, handlebar, seatpost, and saddle hardware  | •   |   |          |    |  |    |    |
| Inspect stem, handlebar, seatpost, saddle, and headset adjustment   | •   |   |          |    |  |    |    |
| Inspect reflectors, lights, and other safety equipment  | •   |   |          |    |  |    |    |
| Inspect grips. Clean or replace as necessary  |     |   |          | •  |  | •  |    |
| Inspect accessory hardware  |     | • | •        | •  | •  | •  |    |
| Inspect headset condition and adjustment  |     | ٧ | ٧        | ٧  | ٧  | ٧  |    |
| Inspect Carbon Armor and stay protectors  |     |   |          |    |  | ٧  |    |
| Service headset (additional care is required after riding in rain)  |     |   |          | ٧  |  | ٧  |    |
| Clean/apply grease or carbon paste to stem and seatpost   |     |   |          |    |  | ٧  |    |
| ABP Dropouts  |     |   |          | -, |  | -1 |    |
| Remove, clean, grease and re-install hardware  Wheels   |     |   |          | ٧  |  | ٧  |    |
| Semi-Annual Wheel Tune-up and Safety Inspection   |     |   |          | ٧  |  | ٧  |    |
| Verify tightness of wheel quick-release skewers   | •   |   |          | V  |  | V  |    |
| Inspect spokes for damage   | •   |   |          |    |  |    |    |
| Inspect rims for wear or damage   | •   |   |          |    |  |    |    |
| Verify that wheels are centered and spin freely without play  | •   |   |          |    |  |    |    |
| Inspect spoke tension and wheel true  |     | ٧ | ٧        | ٧  | ٧  | ٧  |    |
| Inspect wheel bearing condition and adjustment  |     | ٧ | ٧        | ٧  | ٧  | ٧  |    |
| Inspect brake disc hardware   |     | ٧ | ٧        | ٧  | ٧  | ٧  |    |
| Clean and lubricate quick-release skewers/axles   |     |   |          |    |  | •  |    |
| Inspect hub and perform freehub service   |     |   |          | ٧  |  | ٧  |    |
| SRAM  |     |   |          |    |  |    |    |
| Replace tubless rim tape (if appplicable)   |     |   |          |    |  | ٧  |    |
| Tires   |     |   |          |    |  |    |    |
| Inspect tire pressures and properly inflate if necessary  | •   | ı | <u> </u> | ]  | <u>I</u>   |    |    |

| Inspect tread and sidewall for damage, wear or debris     | • |   |   |   |   |  |
|---|---|---|---|---|---|--|
| Recharge TLR sealant and clean valve (if set up tubeless) |   | • | • | • | • |  |
| Measure tread depth to gauge wear                         |   | ٧ | ٧ | ٧ | ٧ |  |