Kid's Mountain									
Service at the indicated distance or time - whichever is most appropriate for	Months	Even	New Bike	3	6	9	12		
	Miles	Every	1st	200	400	600	800		
your riding conditions	Hours	Ride	Service	25	50	75	100		
Annual Tune-up and Safety Inspection							V		
Electronics									
Replace computer and sensor batteries							•		
Front Suspension									
Clean fork with mild soap and water, dry with soft towel		•							
Inspect upper tubes for scratches		•							
Lubricate dust seals and upper tubes		•							
Inspect preload/air pressure and sag		•							
Inspect for visual damage and function of all controls		•							
Inspect for visual damage and taleform of an controls		-	v	v	V	v	v		
			v	v	V	v	v		
Suntour									
Air									
Lubricate lower casting					V		V		
Change 80W oil in air chamber					V		v		
Coil									
Lubricate slider sleeve and wiper					V		V		
RST									
Replace dust seals					V		V		
Replace lubricant/grease					V		V		
Replace remote lockout cable							V		
X-Fusion									
Remove lowers, clean/inspect bushings and change oil bath if necessary				٧	٧	V	V		
Clean and lubricate air spring assembly					V		V		
Replace dust wiper and air seals							V		
Change oil in damping system							V		
Rear Suspension									
Inspect preload/air pressure and sag		•							
Inspect rear suspension hardware		•							
Inspect for visual damage and function of all controls		•							
Clean shock with mild soap and water, dry with soft towel		•							
		-	-1						
Re-torque rear suspension hardware			V						
ABP Dropouts							-		
Remove, clean, grease and re-install hardware					V		V		
X-Fusion									
Inspect shock hardware		•							
Remove air canister, clean and lubricate				V	V	V	V		
Replace air sleeve seals					V		V		
Full damper system rebuild and oil change							V		
					Ī				
Brakes									
Brakes Test brake function		•							
Test brake function		•							
Test brake function Inspect brake pad and rim/disc wear		•							
Test brake function Inspect brake pad and rim/disc wear Inspect brake cables and housing for wear or damage		•							
Test brake function Inspect brake pad and rim/disc wear Inspect brake cables and housing for wear or damage Inspect brake hoses for damage		•							
Test brake function Inspect brake pad and rim/disc wear Inspect brake cables and housing for wear or damage Inspect brake hoses for damage Inspect brake mounting hardware		•	•		•		•		
Test brake function Inspect brake pad and rim/disc wear Inspect brake cables and housing for wear or damage Inspect brake hoses for damage Inspect brake mounting hardware Apply lubricant to brake lever pivots		•	•	•	•	•	•		
Test brake function Inspect brake pad and rim/disc wear Inspect brake cables and housing for wear or damage Inspect brake hoses for damage Inspect brake mounting hardware Apply lubricant to brake lever pivots Lubricate brake pivots		•		•	•	•	•		
Test brake function Inspect brake pad and rim/disc wear Inspect brake cables and housing for wear or damage Inspect brake hoses for damage Inspect brake mounting hardware Apply lubricant to brake lever pivots Lubricate brake pivots Bleed disc brake system		•	•	•	•	•	• • V		
Test brake function Inspect brake pad and rim/disc wear Inspect brake cables and housing for wear or damage Inspect brake hoses for damage Inspect brake mounting hardware Apply lubricant to brake lever pivots Lubricate brake pivots		•	•	•	•	•	•		
Test brake function Inspect brake pad and rim/disc wear Inspect brake cables and housing for wear or damage Inspect brake hoses for damage Inspect brake mounting hardware Apply lubricant to brake lever pivots Lubricate brake pivots Bleed disc brake system		•	•	•	•	•	• • V		
Test brake function Inspect brake pad and rim/disc wear Inspect brake cables and housing for wear or damage Inspect brake hoses for damage Inspect brake mounting hardware Apply lubricant to brake lever pivots Lubricate brake pivots Bleed disc brake system		•	•	•	•	•	• • V		
Test brake function Inspect brake pad and rim/disc wear Inspect brake cables and housing for wear or damage Inspect brake hoses for damage Inspect brake mounting hardware Apply lubricant to brake lever pivots Lubricate brake pivots Bleed disc brake system Replace disc brake fluid		•	•	•	•	•	• • V		
Test brake function Inspect brake pad and rim/disc wear Inspect brake cables and housing for wear or damage Inspect brake hoses for damage Inspect brake mounting hardware Apply lubricant to brake lever pivots Lubricate brake pivots Bleed disc brake system Replace disc brake fluid Drivetrain		•	•	•	•	•	• • V		

		r		1	1	
Inspect pedals for looseness or bearing play	•					
Clean/degrease drivetrain				V		٧
Inspect chain and sprockets for wear		V		V		٧
Inspect derailleurs and lubricate pivots		٧		V		٧
Inspect derailleur hanger alignment and hardware		٧		V		٧
Inspect the crank/crankarms for damage or play		V		V		٧
Clean and inspect the bottom bracket cable guide				V		٧
Inspect the bottom bracket		V		V		V
Service pedals/grease threads						V
Service bottom bracket						٧
Frame and Components						
Clean and polish finish	•					
Inspect frame and fork	•					
Inspect stem, handlebar, seatpost, and saddle hardware	•					
Inspect stem, handlebar, seatpost, and sudde hardware						
Inspect reflectors, lights, and other safety equipment	•					
Inspect adjustment and operation of training wheels	•					
Inspect acjustment and operation of training wheels		•	•	•	•	
Inspect accessory naroware Inspect headset condition and adjustment		v	v	v	v	v
		v	v	v	v	V V
Inspect Carbon Armor and stay protectors						v v
Service headset						V V
Clean/apply grease or carbon paste to stem and seatpost						v
Wheels						
Semi-Annual Wheel Tune-up and Safety Inspection				V		٧
Verify tightness of wheel quick-release skewers	•					
Inspect spokes for damage	•					
Inspect rims for wear or damage	•					
Verify that wheels are centered and spin freely without play	•					
Inspect spoke tension and wheel true		V	V	V	V	V
Inspect wheel bearing condition and adjustment		٧	V	V	V	V
Inspect brake disc hardware		٧	V	V	V	٧
Clean and lubricate quick-release skewers/axles						•
Inspect hub and perform freehub service				٧		٧
Tires						
	•					
Inspect tire pressures and properly inflate if necessary						
Inspect tread and sidewall for damage, wear or debris	· ·					
Measure tread depth to gauge wear				V		V